
DECORATIVE WALL MOULDINGS

# Wall moulding – D4ML47

Wall moulding D4ML47 is a polyurethane wall moulding, primed finish.

PRIMED POLYURETHANE | POLYURÉTHANE | INTÉRIEUR | COLLAGE

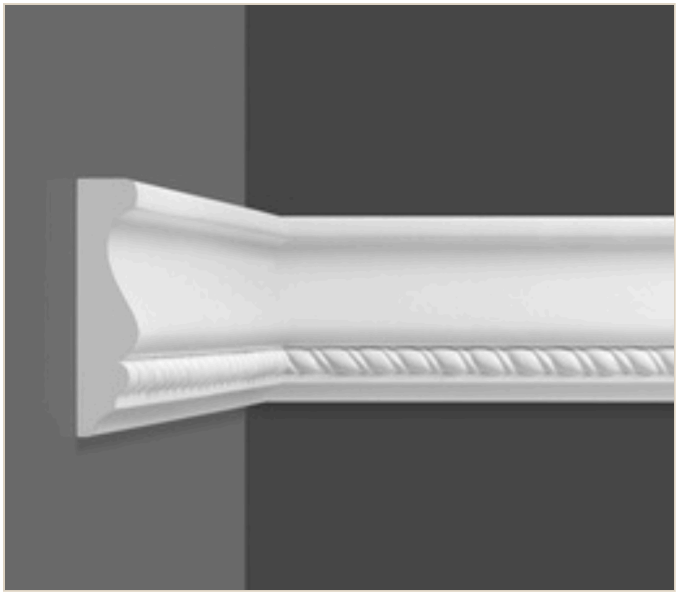

## IDENTIFICATION

| | |
|---|---|
| Dartank reference | **D4ML47** |
| Dartank EAN | **3701839324950** |
| Material | **Primed polyurethane** |
| Colors | **Blanc** |
| Thickness | **2 cm** |
| Sales unit | **Piece** |

OVERVIEW

## Overview

A light, hard polyurethane supplied white and primed: bonded to the wall or ceiling, then painted in the colour of your choice.

## PRODUCT CHARACTERISTICS

| | |
|---|---|
| Material | **Polyuréthane** |
| Finish | **Apprêt** |
| Application | **Intérieur** |
| Installation | **collage** |

## THE MATERIAL

### Primed polyurethane

Polyurethane mouldings supplied white with a primer coat: cornices, wall mouldings, skirting boards, ceiling roses and pelmets, bonded then painted.

| | |
|---|---|
| Application | **Interior** |
| Composition | **Polyurethane** |
| Factory finish | **White, factory primer coat, to be painted** |
| Installation method | **Bonding** |
| Compatible paints | **Solvent-free water-based paint** |

## PERFORMANCE AND TEST RESULTS

| Property | Standard | Result |
|---|---|---|
| Water resistance | | **Water-resistant** |

## INSTALLATION

### Installation

1. **Substrate** The substrate must be dry, clean, dust-free and degreased. A crumbling wall must be primed first.
2. **1. Measure and cut** Measure carefully, then cut in a mitre box with a fine-toothed saw (45° to 90° cuts). Allow about 10 % extra length for cuts.
3. **2. Sand and dry-fit** Deburr the cuts with fine sandpaper, then dry-fit the pieces to check wall contact and mitre alignment.
4. **3. Apply adhesive** Apply mounting adhesive over the whole contact surface. Also bond the joints between pieces, with jointing adhesive where the range provides one (gap of at least 1 mm).
5. **4. Press and clean** Press the piece along its full length; it can be adjusted for a few minutes. Remove excess adhesive with a spatula or damp sponge.
6. **5. Joints** Let joints dry for 24 h. Fill the wall/moulding junction with adhesive or filler, then sand. Do not use silicone sealant: it cannot be sanded or painted.
7. **6. Paint** Paint with a solvent-free water-based paint in two coats, following the paint maker's drying times. In bathrooms, choose a water-based paint suited to wet rooms.

## MAINTENANCE

### Care and maintenance

| | |
|---|---|
| Routine | **No special maintenance. Dust with a broom or a vacuum cleaner fitted with a clean soft brush.** |
| Lacquered surfaces | **Versions with a factory lacquer finish can be cleaned with a damp cloth, water or an alcohol-free cleaner.** |

## COLOURS AND OPTIONS

### Colors

- Blanc

> **WARNING**
>
> Solvent-based paints are prohibited: use a water-based paint. Do not use silicone sealant at junctions.

Non-contractual document. Values are given for guidance; official documents are available on request.